

ChargeLite™ Wall

INSTALLATION GUIDE



LapSafe®

Introduction

Decide on a suitable location for your ChargeLite™ Wall to be mounted. The unit must be fixed to a solid wall or directly to studs, if the unit is being fitted to a non-solid wall. The use of hollow wall or plaster board type fixings are not recommended. Allow space above and below the wall unit for ventilation.

Ensure that you check the wall prior to any drilling and fixing for electrical cables or other services that may be in the wall/void. Make sure the unit is at an acceptable user height.

Select suitable fixings for the wall that you are fixing to and ensure that you use a minimum of 9 of the possible 16 fixing positions available. (Ensuring as even distribution as possible).

IMPORTANT Two people are required to carry out the installation.

Tools Required

- Power or battery type drill (hammer required for solid walls)
- Drill-bit to suit your fixing type (refer to manufacturer's instructions)
- Pencil/Pen (to mark hole positions)
- Spirit level
- Hammer
- Screwdriver/Power Driver
- Vacuum cleaner

Fixings Required

- 9 Screws 7.5mm x 60mm long
- 9 Wall Plugs 10mm x 50mm long

Product Weight: 28kg



1 Stand Up

Once unpacked, stand the unit up and ensure you have a clear working space around all sides.


2 Open Doors

Open the left hand side door with the white key, and then open the right hand side door with the blue key.




3 Unscrew holding nuts

On the bottom right hand side of the unit there are two holding nuts that need to be unscrewed, these are just finger tight.
Once you have done this, lock the doors back up.

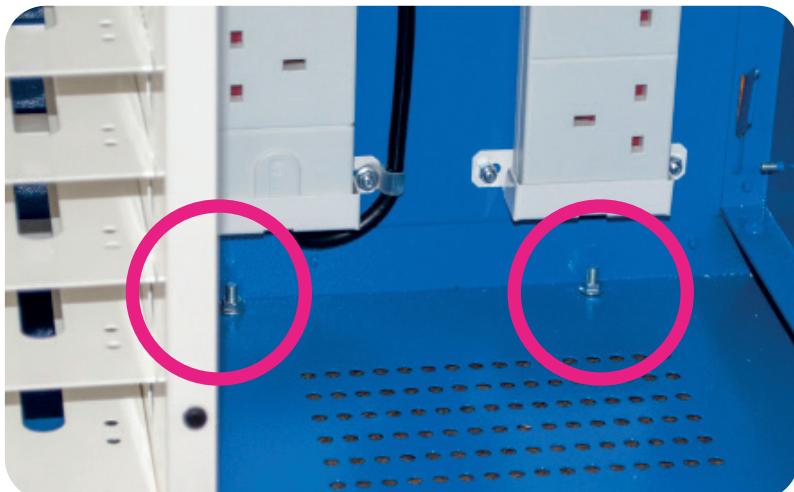

Holding Nuts

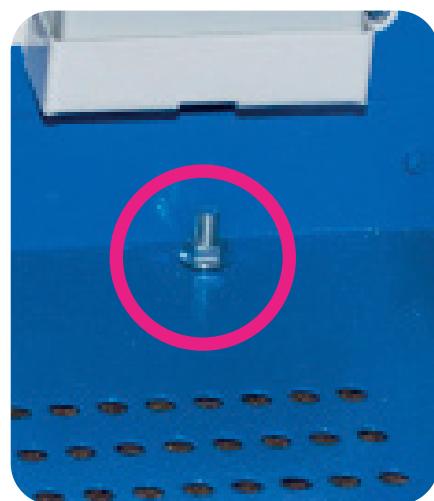

4 Unhook Mounting Bracket

Unhook the mounting bracket by tilting the ChargeLite™ Wall forward and pushing the mounting bracket down.

1. Tilt Forward



2. Push bracket




5 Level The Mounting Bracket

Hold the mounting bracket up against the wall with the bottom lip facing towards you.


Use a spirit level to make sure the bracket is level on the wall and ensure the hanging slots are at the top.

You may need two people for this

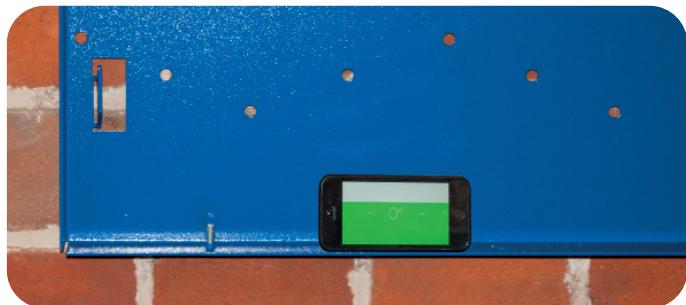

6 Mark Drill Holes

Use a pencil or marker to mark all the fixing holes then remove the Mounting Bracket.

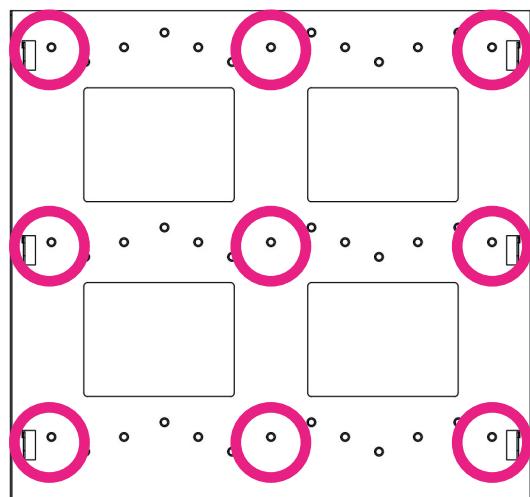

ChargeLite Wall Bracket
showing 9 fixing points

7 Drill Holes

Drill holes for fixings in accordance with the manufacturer's instructions.

Ensure an even distribution of fixings

Use a minimum of 9 fixings

Note: Instructions are for brick walls only



8 Secure Mounting Bracket

Place the mounting bracket back onto the wall with the bottom lip facing towards you, and screw your fixings into place in accordance with the manufacturer's instructions.



9 Hook the Wall unit

Once the mounting bracket is secured lift the ChargeLite™ Wall into place. There are six hooks along the sides that the unit slides onto.

Two people are required to lift the ChargeLite™ Wall.

Ensure that ChargeLite™ Wall is hooked on correctly and that the three lower studs are through the fixing holes before gently releasing the unit.

10 Secure

Once in place, open both doors again (Step 2) and screw the two holding nuts on to the studs that you removed in Step 3.



Complete

Your new ChargeLite™ Wall should now be successfully installed onto your wall and you are ready to load your cables and devices.

Please refer to the user guide that is supplied with your ChargeLite™ Wall for further information.

Please read the Health and Safety guidance in the User Manual.

If you have any problems please do not hesitate to contact our support team.

Helpful Links



Support Enquiries:

lapsafe.com/support/enquiry

support@lapsafe.com

0800 130 3456



Warranty: lapsafe.com/support/activate-warranty

Warranty Details: lapsafe.com/warranty



Replacement Keys: lapsafe.com/support/keys



Lapsafe Self-Service Solutions Ltd

3 Wakes Hall Business Centre,
Wakes Colne, Colchester, Essex CO6 2DY



0800 130 3456



sales@lapsafe.com



lapsafe.com

LapSafe® The logo for LapSafe, featuring the brand name in a bold, white, sans-serif font with a registered trademark symbol (®) to the right. To the right of the text is a white circular icon with a stylized 'S' shape inside.